

Adding Preventive Maintenance Requirements (without PM workbooks)

The image illustrates the steps to add preventive maintenance requirements in the CVE OnDemand software. The main window shows the 'Scheduled Maintenance (PM)' tab, with a red box highlighting the 'Add PM' button (labeled 3). A red box also highlights the 'Scheduled Maintenance (PM)' tab itself (labeled 2). A red box highlights the 'Get CVe Data' button (labeled 1). A red box highlights the 'Add PM' button in the 'ConfigurePM' dialog box (labeled 5). A red box highlights the 'Frequency (cycles)' field in the dialog box (labeled 4). A red box highlights the 'Add' button in the dialog box (labeled 5). A magnifying glass icon is positioned between the main window and the dialog box.

ConfigurePM

Name of Maintenance: Intermediate Maintenance

No Maintenance Log File

Frequency (cycles): 25000

One-time event

OK Add Cancel

Title	Target PM Interval	PM Performed	PM due
6	83	0	83
5	84	0	84
4	84	0	84
0	5,000	0	5,000
3	75,000	0	75,000
1	25,000	51,083	76,083
2	100,000	51,083	151,083

For complete OnDemand software instructions, please refer to the User Guide.
For technical assistance please email: helpdesk@asttech.com.