

SET UP/INITIALIZATION

Task	Direction
Access CVe Flash Drive	Connect CVe Monitor to PC > Press Button on Monitor Until the Display Shows FLASHdr > Open Windows Explorer > Look For Drive with New Letter Assigned > Copy Desired Files to This Drive.
CVe Monitor Initialization	Push Button on Monitor Until it Does NOT Say FLASHdr > Connect CVe Monitor to PC > Wait for Drivers to Install > Enter Starting Cycle Count > Enter > Customer > Part ID > Tool ID > Generate Report > OK

PREVENTIVE MAINTENANCE

Task	Direction
Add PM Requirements	Scheduled Maintenance > Add PM > Name of Maintenance > Frequency > Add
Attach Customer Created Excel Workbooks to PM Points	Copy Excel Workbook(s) to C: Program Data/CVe OnDemand/Maintenance Templates > Scheduled Maintenance Tab > Add PM > Name of Maintenance > Select Workbook from Dropdown > Frequency > Add
PM Checklist Workbook Generator	Open CVe Checklist Master for ODPC PM.xlsm Excel File > Enable Content > Complete Basic Tool Info > Check Desired PM Points > In Row 10: Hold CTRL + Click for Each Desired Checklist > Generate Inspection Lists > Save as C: Program Data/CVe OnDemand/CVe/OnDemand Report > Save

REPORTS

Task	Direction
Generate a Performance Report & Activity Log (Log PM)	Get CVe Data > Generate Report > CVe Connected By/Company > Check Reason for Connecting CVe > Select PM Checkpoint(s) > Optional Activity Log Notes > Email Address > Continue > Open to view or Continue to Return to CVe Window
View Excel or PDF Reports	Reports > Select Recently Run PDF/xls Report > View/Print Report
Email Excel or PDF Reports	Reports > Select Recently Run PDF/xls Report > Enter Email Destination > Email Report > OK
View Encrypted Reports	Reports > Select Recently Encrypted Root File > Create Report > Open
Email Encrypted Reports	Reports > Select Recently Encrypted Root File > Enter Email Destination > Email Molding Data > Continue > OK

CLONING

Task	Direction
Clone a Monitor	Get Passcode from HelpDesk@ASTTech.com > Connect source Monitor to OnDemand > Get CVe Data > Support > Unlock Password > Paste Passcode > Unlock > Cancel > (with source Monitor connected) Continue > Disconnect source Monitor > Continue > Connect new Monitor (FlashDr CANNOT appear on readout) > Continue > Enter 0 (zero) > Enter > Tools Tab > (from source Monitor) Customer Name, Part ID, Tool ID > Generate Report > Continue > General Query > Continue > OK

For complete OnDemand software instructions, please refer to the User Guide.
For technical assistance please email: helpdesk@asttech.com.