

CVe Monitor Cloning

Device Disconnect Required

Cancel


Disconnect CVe and click "Continue" or "Cancel" to abort

Source Monitor

Continue

Requirements: Installed & Configured OnDemand Software, the source Monitor with the data to be copied, the new (destination) Monitor, 1 USB to Mini USB cable to connect the Monitor to you PC.

Contact HelpDesk@ASTTech.com and provide them with the Device ID for the source Monitor and the new Monitor. They will respond with a passcode to copy the Monitor. COPY the passcode to your clipboard.

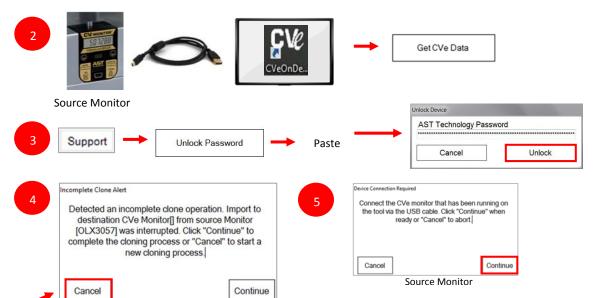

Device Connection Required


Cancel


Connect the new CVe Monitor.

Press the button on the Monitor until the readout does


not display "FlashDr" then click "Continue" or

"Cancel" to abort

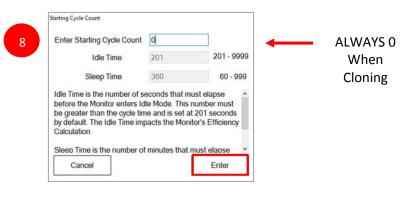



Enter info from Source Monitor.

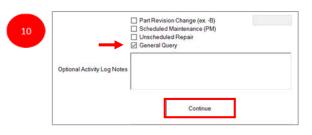



For complete OnDemand software instructions, please refer to the User Guide.

For technical assistance please email: helpdesk@asttech.com.

Continue